

5 Download

Manual

We continue to develop and improve our products, adding new functions and features on a regular basis, so we want you to always have the latest manual. For this reason, we do not include a manual in an electronic or printed form but kindly ask you to download the latest manual using the following link:

ihse.com/manual

Tera Tool

The Tera Tool provides following functions:

- Advanced configuration
- Extended monitoring options
- System update (firmware update)
- Local backup option
- Documentation

Please download the Tera Tool from the following download link:

ihse.com/software

IHSE Headquarters

IHSE GmbH
Benzstrasse 1
88094 Oberteuringen
Germany

phone +49 7546 9248-43
techsupport@ihse.de
www.ihse.de

Support hours:

Monday - Thursday
Friday

CET

8.00 am to 6.00 pm
8.00 am to 5.00 pm

IHSE USA

IHSE USA LLC
1 Corporate Drive
NJ 08512 Cranbury
USA

phone +1 732 738 8780
info@ihseusa.com
www.ihseusa.com

Support hours:

Monday - Friday

EST

9.00 am to 5.00 pm

IHSE Asia

IHSE GmbH Asia Pacific Pte Ltd
158 Kallang Way
349245 Singapore
Singapore

phone +65 6841 4707
sales@ihseapac.com
www.ihseapac.com

Support hours:

Monday - Friday

SGT

9.00 am to 6.00 pm

IHSE China

IHSE China Co., Ltd.
Room 814, Building 3, Kezhu Road
No. 233 Huangpu District
Guangzhou PRC

phone +86 189 888 381
techsupport-cn@ihse.com
www.ihse.com.cn

Support hours:


Monday - Friday

CST

9.00 am to 6.00 pm

Draco vario SNMPv3 Module

Add-on Module 474-SNMPv3-R1

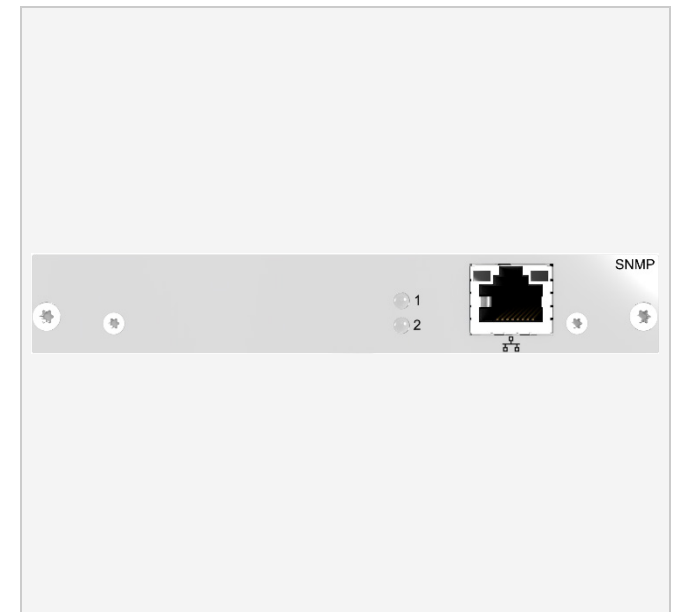

1 Scope of Delivery


Package Contents


Please check if your package contains following items:

- 1x 474-SNMPv3-R1
- Quick Setup

 If anything is missing, please contact your dealer.

2 System Setup

 The SNMPv3-R1 module can only be installed in specified slots of 6-slot or 21-slot chassis with internal backplane: BODY6 (slot 5), BODY21 (slot 21).

 First-time users are recommended to set up the system in a test environment that is limited to a single room. This makes it easier to identify and solve any cabling problems, and experiment with your system more conveniently.


SNMPv3 Module Installation


1. Mount the SNMPv3 module in the specified slot of the chassis.
2. Connect the chassis containing the SNMPv3 module to the power supply.
3. Download the current version of the Draco tera Tool (see the following page).

Setting Advanced Configuration in the Draco tera Tool


1. Install the Draco tera Tool (see manual).
2. Connect the SNMPv3 module to the TCP/IP network it should be used with via network cable.
3. Start the tool and connect to the SNMPv3 module.
The default IP address is 192.168.100.99, the username is admin, and the password is admin.
4. Select System > Network > SNMP in the task area of the Draco tera Tool.

5. Configure the SNMPv3 module with the desired IP address and the parameters to be monitored and then restart the SNMPv3 module

 After the advanced configuration of the system it is recommended to save the configuration under **Remote Save...** and then restart the SNMPv3 module by selecting **Device > Advanced Service > Restart SNMP Board.**


 After changing the IP address, the new IP address is required to connect to the Draco tera Tool after restart.

6. Integrate the SNMPv3 module into your existing SNMP infrastructure by using the provided MIB file.

 In case you do not have the MIB file available, please contact your distributor.


3 System Overview

Example 474-BODY21/4U

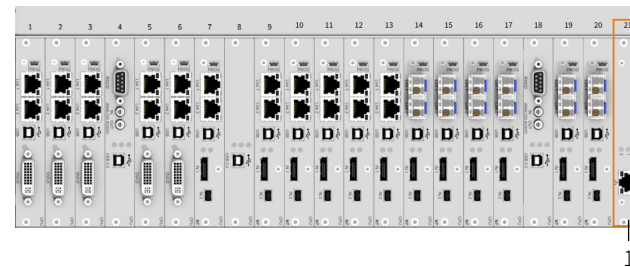

- 1 474-SNMPv3-R1 module (slot 21)

Example 474-BODY6BP

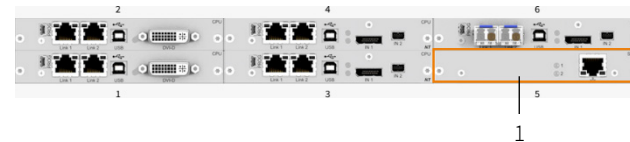

- 1 474-SNMPv3-R1 module (slot 5)

4 Technical Support

Prior to contacting support, please ensure you have read this manual, and then installed and set-up your device as recommended.

Support Checklist

To efficiently handle your request, it is necessary that you complete a support request checklist:


ihse.com/checklist

Please have the following information available before you call:

- Company, name, phone number and e-mail address
- Type and serial number of the device (see rear side of device)
- Date and number of sales receipts, name of dealer if necessary
- Issue date of the existing manual
- Nature, circumstances, and duration of the problem
- Involved components (such as graphic source/CPU, OS, graphic card, monitor, USB HID/USB 2.0 devices, interconnect cable) including manufacturer and model number
- Results from any testing you have done

Shipping Checklist

1. To return your device, please contact your dealer to obtain an RMA number (Return-Material-Authorization).
2. Package your devices carefully, preferably using the original box. Add all pieces which you received originally.
3. Please note your RMA number visibly on your shipment.

 Please understand that devices which are sent in without an RMA number cannot be accepted. The shipment will be sent back without being opened; postage unpaid.